

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	04-24-42886	Supersport Fender Bracket	1
2)	01-5106100016-SS	M6-1.0x16mm Socket Button Head Bolt	4
3)	01-7406100-27	M6-1.0 Hex Flange Nut	2
	46-0001	License Plate Bolt Light Kit (Optional, Availabale Separately)	

**** WILL NOT FIT WITH STOCK MUFFLER ATTACHED. FOR USE WITH AFTERMARKET MUFFLER ONLY ****

46-7001-03

SUPERSPORT FENDER KIT

**TRIUMPH DAYTONA 675
2006-10**

TOOLS REQUIRED

Ref. Description

- 1) 3/8" Drive Ratchet
- 2) 3" Extension
- 3) 10mm Socket
- 4) 12mm Socket
- 5) 13mm Socket
- 6) 4mm Allen Socket


Ref. Description

- 7) 5mm Allen Socket
- 8) 8mm Allen Socket
- 9) 10mm Wrench
- 10) 12mm Wrench
- 11) Torque Wrench
- 12) Spring Tool or Needlenose Pliers

**** WILL NOT FIT WITH STOCK MUFFLER ATTACHED. FOR USE WITH AFTERMARKET MUFFLER ONLY ****

INSTALLATION INSTRUCTIONS

- 1) Follow the instructions provided with the exhaust you are installing (we recommend the Jardine Dual-outlet RT-1 exhaust, of course) until you reach the point when you are removing the stock license plate bracket.
- 2) Remove the left and right turn signal mounting bolts. Slide the turn signals/license plate light assembly away from the license plate mount and disconnect all wires. Make note of the right and left turn signal wiring. Set turn signal assembly aside. (Fig. 1)
- 3) Remove the four bolts that secure the license plate bracket to the stock muffler. Remove the license plate bracket.
- 4) Remove the original muffler, and any other instructed components.

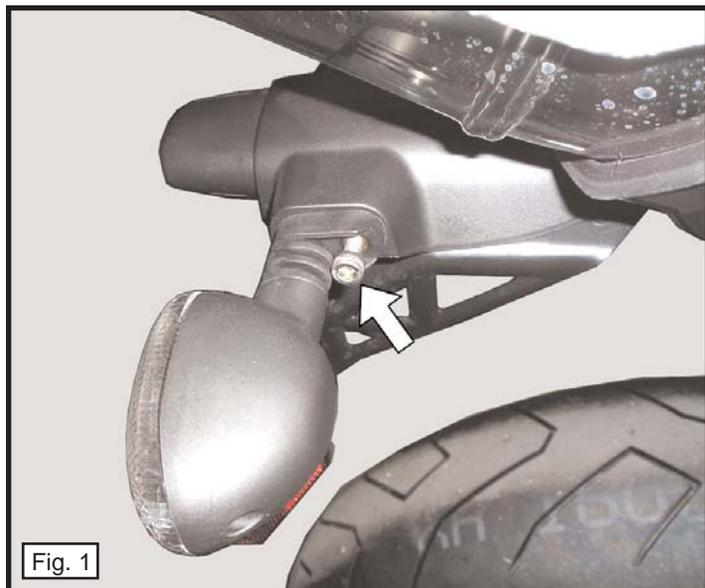



46-7001-03

SUPERSPORT FENDER KIT

TRIUMPH DAYTONA 675
2006-10

INSTALLATION INSTRUCTIONS

- 5) Remove the two rearmost inner fender mounting bolts. Place the supplied Supersport fender bracket against the rear fender and secure the bracket to the subframe using two supplied M6-1.0x16mm button head bolts. Tighten bolts to factory specification. (Fig. 2)
- 6) Using the two supplied M6-1.0x16mm socket button head bolts, and two M6-1.0 hex flange nuts, mount the turn signals to the locations provided on the supersport fender bracket. Fully tighten the mounting hardware. (Fig. 3)
- 7) Route the turn signal wiring as show in (Fig. 4) and reconnect all turn signal wires to the harness.
- 8) Finish installing your exhaust system. Prior to riding motorcycle ensure that all lights and signals are working properly.

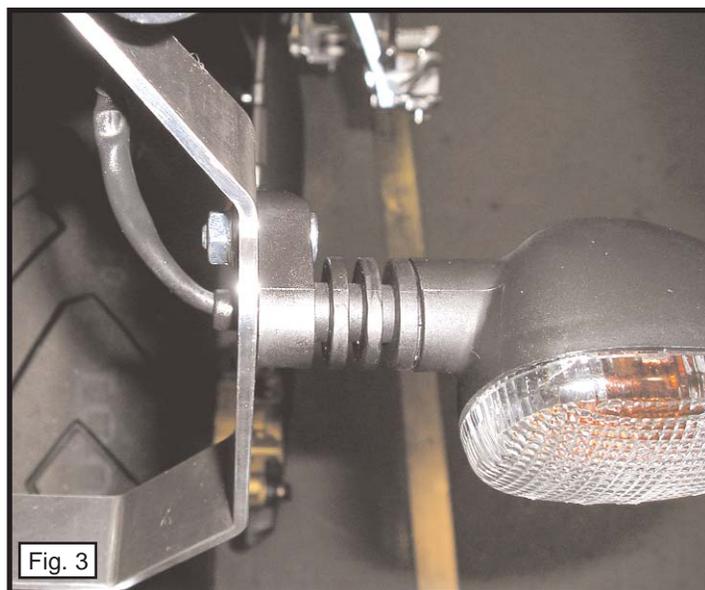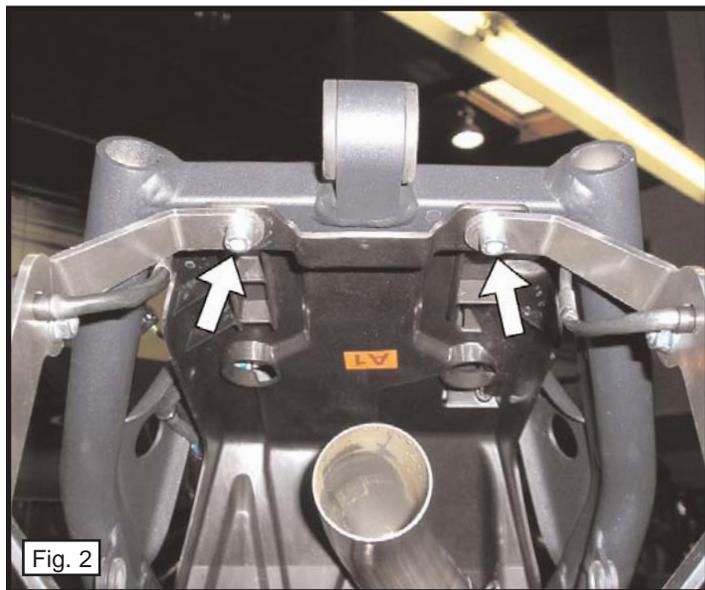

Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13