

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	00-200-02208	Aluminum Muffler Assembly - Right	1
2)	00-200-02207	Aluminum Muffler Assembly - Left	1
3)	00-200-02206	Midpipe Tube - Right	1
4)	00-200-02205	Midpipe Tube - Left	1
5)	03-46-46643	Muffler Mounting Strap	2
6)	07-27-46644	Rubber Isolator, Mounting Strap	2
7)	07-3842058-35	T-Bolt Clamp, #200-58	2
8)	07-41-40004	Swivel Spring, Short	2
9)	01-7408125-27	M8-1.25 Hex Flange Nut	2

08-50-46649 REV. A

19-2011-123-02

SLIP-ON EXHAUST, SS/ALUMINUM

YAMAHA YZF-R1
2009

TOOLS REQUIRED

Ref. Description

- 1) 3/8" Drive Ratchet
- 2) 3" Extension
- 3) 8mm Socket

Ref. Description

- 4) 10mm Socket
- 5) 12mm Socket
- 6) 13mm Deep Socket

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Remove the two bolts from the rider seat. Remove the seat. (Figure #1)
- 3) Remove the passenger seat with the key.
- 4) Remove the two plastic screws from the top of the tail section. (Figure #2)
- 5) Remove the bolt from the center of the tail section. (Figure #3)
- 6) Remove the plastic shields that cover the stock mufflers on each side. (Figure #4)
- 7) Remove the two black pins from the bottom of the left and right tail section. (Figure #5)
- 8) Disconnect the passenger seat release cable. Carefully spread and remove the tail section from the motorcycle. (Figure #6)
- 9) Remove the bolts securing the plastic heat shield to the right side exhaust pipe. Remove the shield. (Figure #7)
- 10) Loosen the clamps at the stock left and right midpipe connections. (Figure #8)
- 11) Unbolt the left and right mufflers from the brackets. Remove the mufflers. (Figure #9)



FIGURE #1



FIGURE #2


19-2011-123-02

SLIP-ON EXHAUST, SS/ALUMINUM

YAMAHA YZF-R1
2009

INSTALLATION INSTRUCTIONS

- 12) Place one supplied t-bolt clamp onto the new left side midpipe. Slide the midpipe over the left side headpipe outlet. Do not tighten the t-bolt clamp at this time.
- 13) Slide the new left side muffler over the midpipe until fully seated. Secure to midpipe using one supplied swivel spring.
- 14) Using a supplied muffler mounting strap, rubber isolator strap, one M8-1.25 hex flange nut, and the original bolt, secure the muffler to the motorcycle. Do not fully tighten at this time.
- 15) Repeat steps 13-14 for the right side.
- 16) Position the exhaust system and then fully tighten the t-bolts clamps and muffler mounting bolts.
- 17) Clean all fingerprints and grease from the new exhaust system. Start the motorcycle and check for any exhaust leaks.
- 18) Reinstall the plastic heat shields over the both midpipes.
- 19) Place the tail section back onto the motorcycle. Reconnect the passenger seat release cable.
- 20) Reinstall all tail section mounting hardware, including the center bolt, plastic screws, and plastic push pin connectors.
- 21) Reinstall the passenger seat and rider seat.



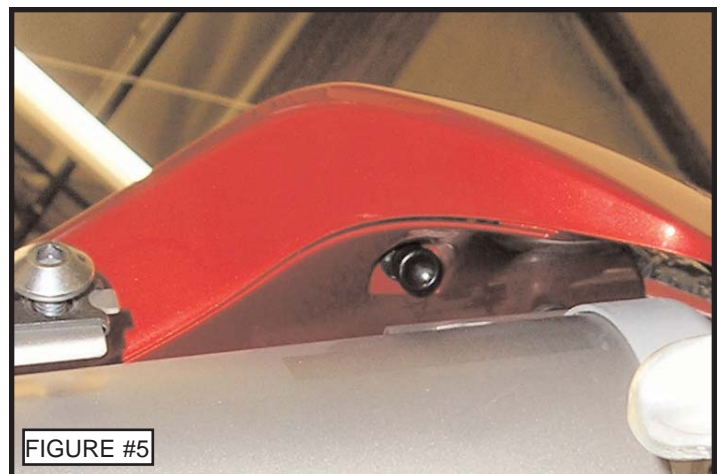


19-2011-123-02

SLIP-ON EXHAUST, SS/ALUMINUM

YAMAHA YZF-R1
2009

INSTALLATION INSTRUCTIONS

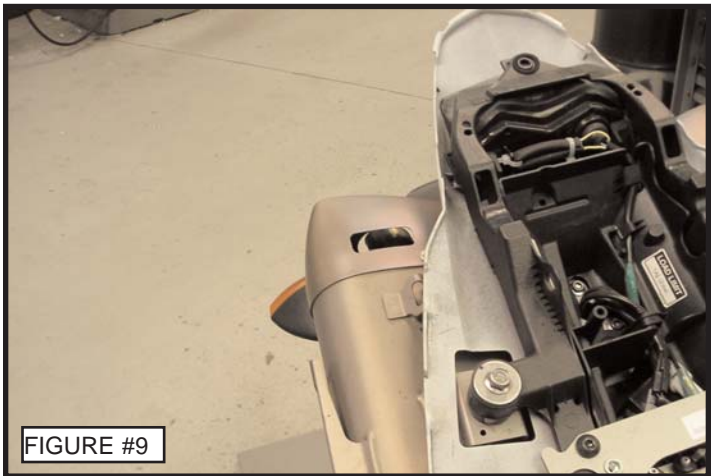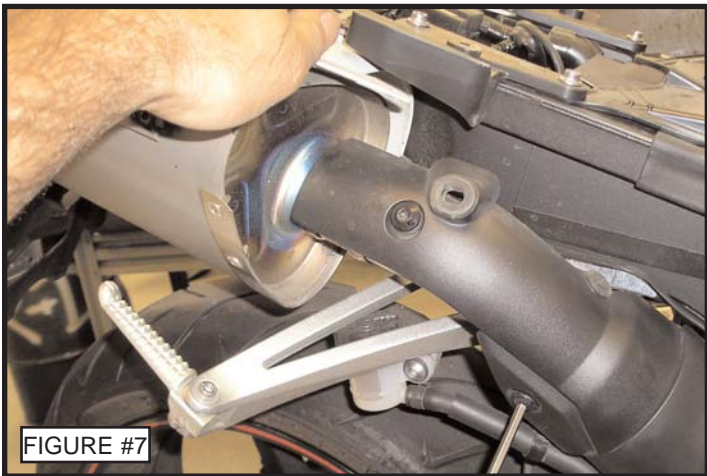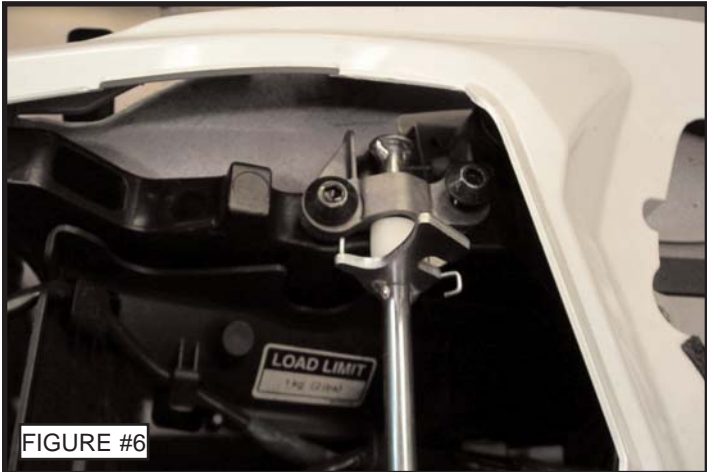



Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400