




46-4004-03

SUPERSPORT FENDER KIT

SUZUKI SV650 / SV650S / SV1000S
2004-2008

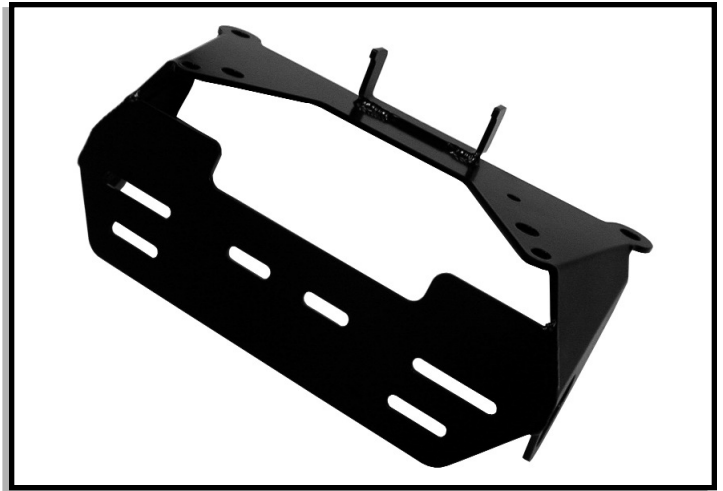

PARTS INCLUDED


1 - Supersport Fender

TOOLS REQUIRED

Ratchet
Torque Wrench
4mm, 5mm, 6mm Allen Socket
8mm, 10mm, 12mm Socket
#2, #3 Phillips Screwdriver

INSTALLATION INSTRUCTIONS

- 1) Remove the button head bolt that secures the black cover below the rider seat. Firmly pull the cover and it will release from the two rubber grommets. Repeat for the opposite side. See Figure #1.
- 2) Remove the two button head bolts that secure the rider seat to the motorcycle. Remove the rider seat. Remove the passenger seat. Remove the owners manual, tool kit and prop rod from the trunk.
- 3) Remove the two bolts that secure the rear grab rail to the sub frame. Remove the grab rail. See Figure #2.
- 4) Remove the socket head bolt that secures the passenger seat lock release cable. Disconnect the cable and bracket, and set aside.
- 5) Remove the indicated push pins and screws from the tail section, as shown in Figures #3 & 4.
- 6) Disconnect the tail light, license plate light, and turn signal wires at the connectors inside the trunk.
- 7) Spread and carefully remove the tail section from the rear sub frame.

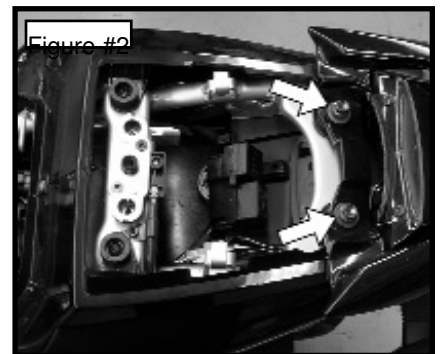

46-4004-03

SUPERSPORT FENDER KIT

**SUZUKI SV650 / SV650S / SV1000S
2004-2008**

8) Remove the indicated bolt from both sides of the under tray. Spread the tabs and firmly pull down on the under tray to release it from the rear fender. See Figure #5.

9) Feed the license plate light and turn signal wires out through the holes in the rear fender. Mark the left and right turn signals, then remove them from the rear fender. Detach the fuse block from the rear fender inside the trunk area.

10) Discard the support brackets for both the turn signals and the license plate light. Remove your license plate from the small license plate bracket.

12) Remove the four bolts that secure the rear fender to the sub frame. Remove the rear fender.

13) Mount the turn signals to the new Supersport Fender Bracket using the original hardware.

14) Using the original bolts, mount the new Supersport Fender Bracket to the sub frame in the same location as the original rear fender. Tighten bolts to 13 N.m(9.5 lb-ft).

15) Raise the under tray and secure it to the sub frame using the original hardware. Tighten bolts to 13 N.m(9.5 lb-ft).

16) Carefully slide the tail section onto the sub frame. Reconnect and secure the passenger seat release cable. Tighten bolt to 10 N.m(7.0 lb-ft).

17) Secure the tail section to the sub frame using the original push pins and hardware. Fully tighten all hardware.




18) Attach the fuse block to the tabs on the Supersport Fender Bracket. Feed the turn signal wires through the holes in the bracket. Reconnect the wires inside the trunk.

19) Using the original bolts, reinstall the rear grab rail to the sub frame. Tighten bolts to 29 N.m (21 lb-ft).

20) Reinstall the rider seat and passenger seat. Reinstall the left and right lower side covers.

21) Mount the license plate to the Supersport Fender Bracket using the original hardware.

22) Check the turn signals for proper operation prior to riding the motorcycle.

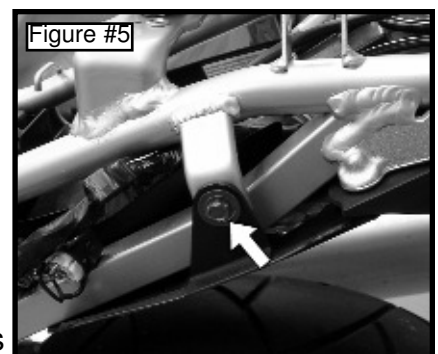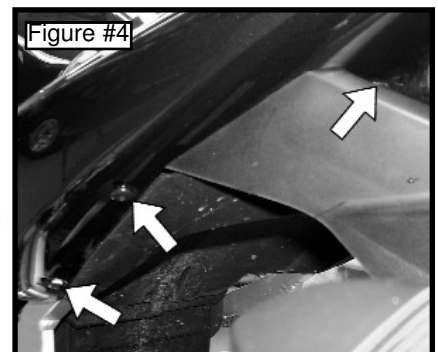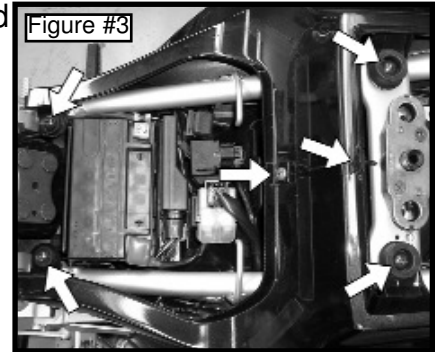

Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13