

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	04-24-47556	Supersport Fender Bracket	1
2)	01-44461016662	Nylon Spacer	4
	46-0001	License Plate Bolt Light Kit (Optional, Available Separately)	

REV. A
08-50-47557

46-4011-03

SUPERSPORT FENDER KIT


SUZUKI GSX-R600 / GSX-R750
2011

TOOLS REQUIRED

Ref.	Description	Ref.	Description
1)	3/8" Drive Ratchet	5)	10mm Socket
2)	6" Extension	6)	12mm Socket
3)	5mm Allen Socket	7)	Soldering Iron (optional)
4)	8mm Socket	8)	Wire Cutters (optional)

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Using the key, remove the passenger seat (or rear cowl).
- 3) Remove the left and right lower gas tank covers. To do this, unhook each cover from under the front gas tank cover, then carefully detach each piece from the two snap lock connectors and the rubber grommet. (Fig. 1)
- 4) Remove the indicated rider seat mounting bolt from the left & right side. Remove the rider seat. (Fig. 1)
- 5) The right side tail section panel must be removed in order to disconnect the license plate light wire plug. Remove the screw and two push-pin fasteners from the top side of the panel. Then, remove the three push-pin fasteners from the bottom side of the panel. Carefully remove the panel from the motorcycle. (Fig. 2)
- 6) Locate the license plate light wire plug, on the right side of the motorcycle subframe. Disconnect the plug. (Fig. 3)
- 7) Remove the stock rear fender by unbolting it from the tail section of the motorcycle, being careful to feed the license plate light wire out through the hole in the tail section.
- 8) Place the supplied nylon washers between the new Supersport Fender Bracket and the tail section of the motorcycle. Using the original hardware, secure the new bracket to the motorcycle. Tighten bolts to 13 N.m (9.5 lb-ft).

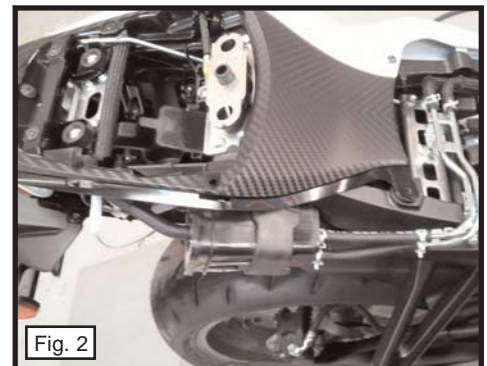

46-4011-03

SUPERSPORT FENDER KIT

SUZUKI GSX-R600 / GSX-R750
2011

-
- 9) Using the original hardware and push pin fasteners, secure the right side tail section panel to the subframe.
 - 10) Reinstall the rider seat and passenger seat (or rear cowl). Reinstall the lower gas tank cover.
 - 11) Mount your license plate to the new license plate bracket.

LICENSE PLATE BOLT LIGHT INSTALLATION (optional, available separately)

- 1) Use the license plate bolt lights to mount your license plate to the Supersport Fender Bracket.
- 2) Locate the now unused license plate light wires inside the tail section.
- 3) Cut and strip the two wires used to power the stock license plate light.
- 4) Attach both the red wires from the license plate light bolts to one of the stripped license plate light wires. Solder the connection and cover.
- 5) Attach both the black wires from the license plate light bolts to the second of the stripped license plate light wires. Solder the connection and cover.
- 6) Turn on the motorcycle and ensure that all lights are working properly prior to riding.

Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13