

PARTS INCLUDED

| Ref. | Part Number | Description | Qty |
|------|-------------|---|-----|
| 1) | 04-24-44655 | Supersport Fender Bracket | 1 |
| | 46-0001 | License Plate Bolt Light Kit (Optional, Available Separately) | |

08-50-44655 REV. A

46-5001-03

SUPERSPORT FENDER KIT


BUELL 1125R
2008

TOOLS REQUIRED

| Ref. | Description | Ref. | Description |
|------|--------------------|------|---------------------------|
| 1) | 3/8" Drive Ratchet | 5) | 10mm Socket |
| 2) | 6" Extension | 6) | 12mm Socket |
| 3) | 5mm Allen Socket | 7) | Soldering Iron (optional) |
| 4) | 8mm Socket | 8) | Wire Cutters (optional) |

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Remove the rear cowl using your key.
- 3) Remove the two bolts under the rider seat and set seat aside. (Fig.1)
- 4) Remove the five bolts attached to the rear tail fairing. Move the fairing to the top of the bike as it still has the rear seat cable attached. (Fig. 2)
- 5) Unplug the turn signal and taillight wires. The tail light has an orange wire, the right turn signal has a purple wire and the left turn signal has a brown wire. (Fig. 3)
- 6) Remove the three bolts from the rear turn signal assembly. (Fig. 4)
- 7) Remove the nuts from the turn signals along with the rubber grommets. (Fig. 5)
- 8) Reinstall the turn signals and rubber grommets in the new assembly using the stock nuts. (Fig. 6)
- 9) Using the stock bolt, install the new assembly and plug the turn signals and tail light into the original connections. (Fig. 7)
- 10) Reinstall the rear fairing using the original hardware.

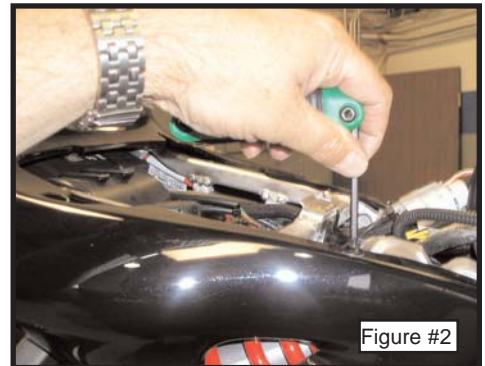



46-5001-03

SUPERSPORT FENDER KIT

**BUELL 1125R
2008**

11) Reinstall the rider seat and rear cowl.

12) Mount your license plate to the new license plate bracket.

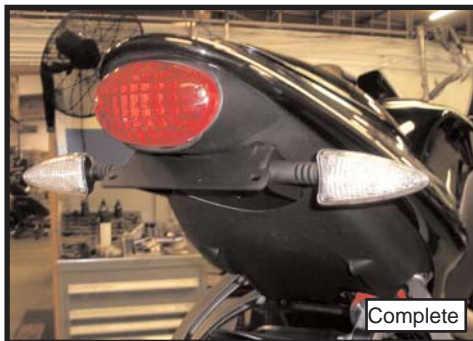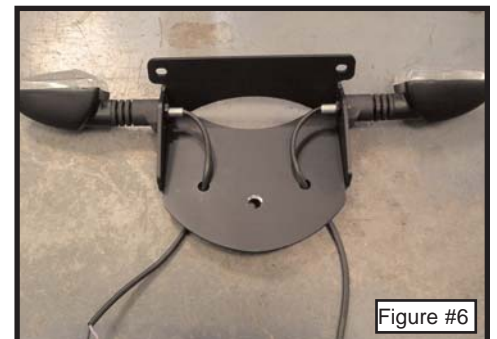

LICENSE PLATE BOLT LIGHT INSTALLATION (optional, available separately)

- 1) Use the license plate bolt lights to mount your license plate to the Supersport Fender Bracket.
- 2) Locate the now unused license plate light wires inside the tail section.
- 3) Cut and strip the two wires used to power the stock license plate light.
- 4) Attach both the red wires from the license plate light bolts to one of the stripped license plate light wires. Solder the connection and cover.
- 5) Attach both the black wires from the license plate light bolts to the second of the stripped license plate light wires. Solder the connection and cover.
- 6) Turn on the motorcycle and ensure that all lights are working properly prior to riding.

Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13