

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	00-200-01233	S-Bend Assembly	1
2)	00-200-01234	Left Side Midpipe Assembly (Small)	1
3)	00-200-01235	Right Side Midpipe Assembly (Large)	1
4)	00-200-01238	RT5 Muffler, Carbon Fiber	1
5)	04-24-44647	Muffler Adapter Bracket	1
6)	01-530812525-27	M8-1.25x25mm Hex Flanged Head Bolt	1
7)	01-520812530-SS	M8-1.25x30mm Socket Head Bolt	1
8)	01-7408125-27	M8-1.25 Hex Flange Nut	2
9)	07-41-40004	Dual Swivel Spring, Short	3
10)	07-38-42058-35	T-Bolt Clamp (#200-58)	2

08-50-45459 REV. B

19-5006-323-02

RT5 SLIP-ON EXHAUST, SS/CARBON

BUELL 1125R
2008

TOOLS REQUIRED



Ref.	Description
1)	3/8" Drive Ratchet
2)	3" Extension
3)	8mm Socket
4)	10mm Socket
5)	12mm Socket
6)	Phillips Screwdriver

Ref.	Description
7)	5mm Allen Socket
8)	8mm Allen Socket
9)	8mm Wrench
10)	11mm Wrench
11)	Torque Wrench
12)	Spring Tool or Needlenose Pliers

INSTALLATION INSTRUCTIONS

NOTE: Make sure the motorcycle is cool and secure on a service lift or stand before attempting any installation.

- 1) Loosen the right side driver foot peg assembly.
- 2) Loosen the two muffler clamps on the headpipes. (Fig. 1)
- 3) Remove the 4 bolts securing the stock muffler to the motorcycle. There are 2 bolts on the right side (Fig. 2) and 2 bolts on the left side (Fig. 3 & 4)
- 4) Lastly, remove the front bolt on the muffler bracket from the left side. (Fig. 5) Remove the stock muffler assembly.
- 5) Install the muffler adapter bracket to the back side of the driver footpeg using the supplied M8-1.25x30mm socket head bolt & M8-1.25 hex flange nut. (Fig. 6)
- 6) With the supplied t-bolt clamps in place, slip the new midpipe assemblies on to the factory headpipes. (Fig. 7)
NOTE: The shorter pipe should be placed on the inside headpipe.
- 7) Install the s-bend into the muffler assembly. Then slide s-bend and muffler assembly onto the new midpipes. (See Figure #8)

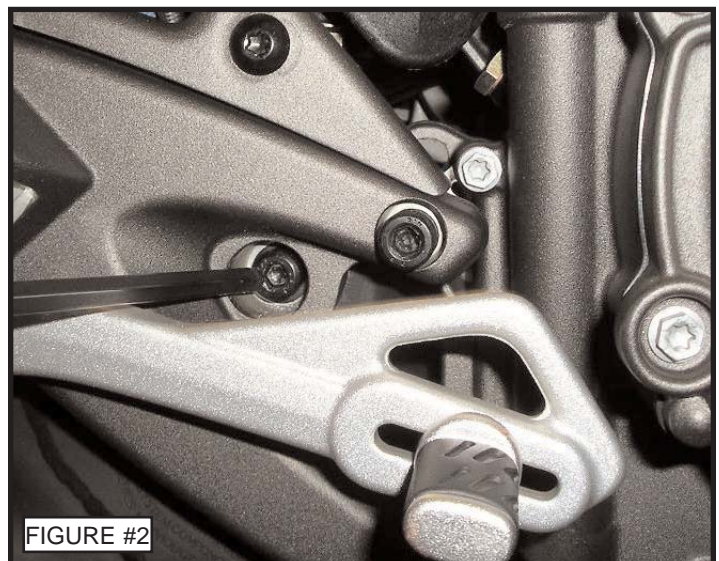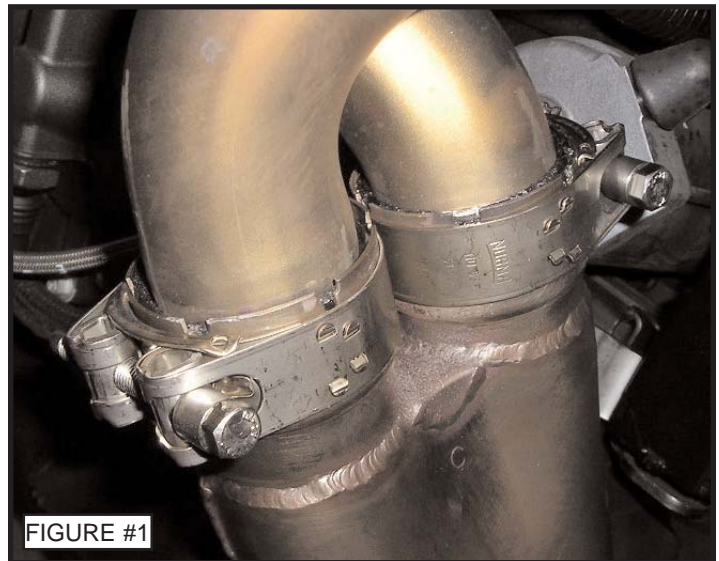




19-5006-323-02

RT5 SLIP-ON EXHAUST, SS/CARBON

BUELL 1125R
2008

INSTALLATION INSTRUCTIONS

- 8) Using the supplied M8-1.25x25mm hex flange bolt and M8-1.25 hex flange nut, attach the muffler assembly to the muffler adapter bracket.
- 9) Attach the provided springs to the slip fit connections on the new exhaust parts.
- 10) Position the exhaust system and fully tighten both t-bolt clamps, then all mounting hardware.

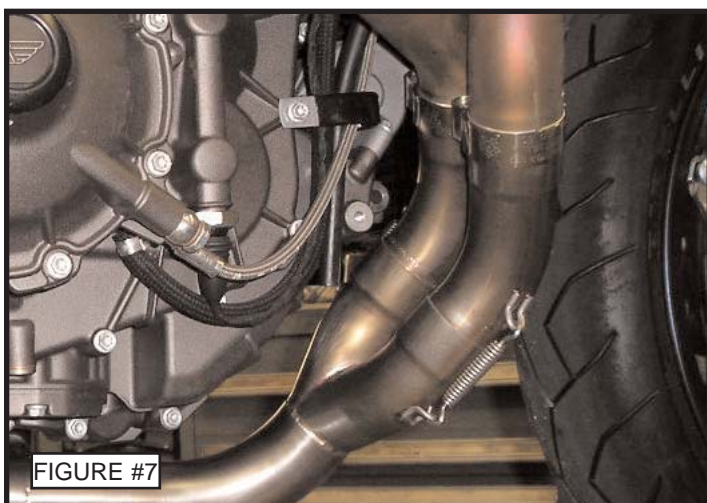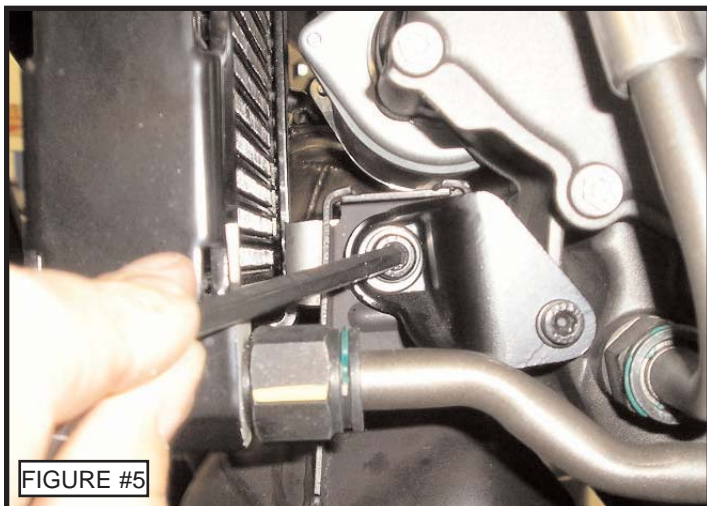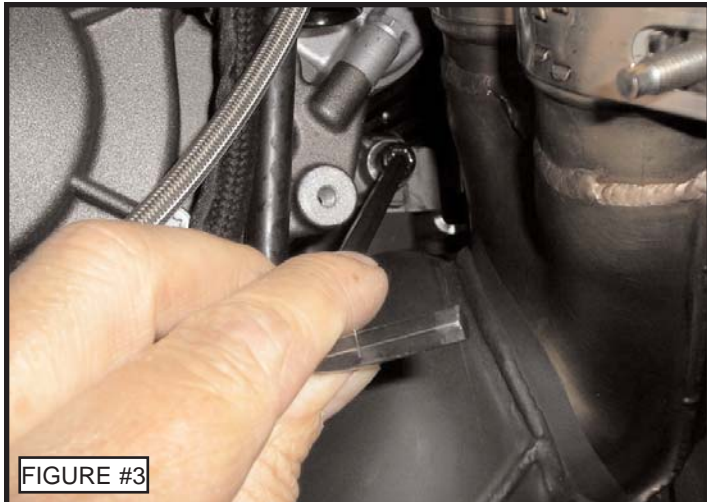

19-5006-323-02

RT5 SLIP-ON EXHAUST, SS/CARBON

BUELL 1125R
2008



Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13