



HARLEY-DAVIDSON SLIP-ON MUFFLERS FOR FLSTS

1997 to 1998

Part Numbers

128-78030 Standard Core

128-78035 Mikuni (Pat) Core

WARNING: THIS SYSTEM IS NOT COMPLETE WITHOUT TWO OF THE FOLLOWING END CAPS:

PART NUMBER 108-7257 CHROME TAPERED END CAP

PART NUMBER 108-8021 CHROME FISHTAIL END CAP

PART NUMBER 108-8022 CHROME TURNDOWN/OUT END CAP

CUSTOMER SERVICE: If you have any problems or questions, please call our technical support staff between 8:00 am and 12:00 pm and 1:00 pm - 5:00 pm Eastern Time. (216) 265-8400 or fax (216) 265-0130.

Kerker Exhaust Products 4540 W. 160th Street, Cleveland, OH 44135
E-mail: sales @ supertrapp.com Web: www.supertrapp.com

STOCK MUFFLER REMOVAL


1. Loosen left and right muffler inlet clamps.
2. Remove muffler hanger bolts (2 per muffler) and remove mufflers.

END CAP INSTALLATION

1. Remove end cap screws from mufflers.
2. Insert end cap, lining up the screw holes.
3. Reinstall and tighten end cap screws.

MUFFLER BRACKET INSTALLATION

1. Place stock muffler clamps on Kerker muffler inlets.
2. Slide muffler onto Left side headpipe.
3. Install Kerker supplied bolts, washers and spacers onto stock muffler support. See figure 1.

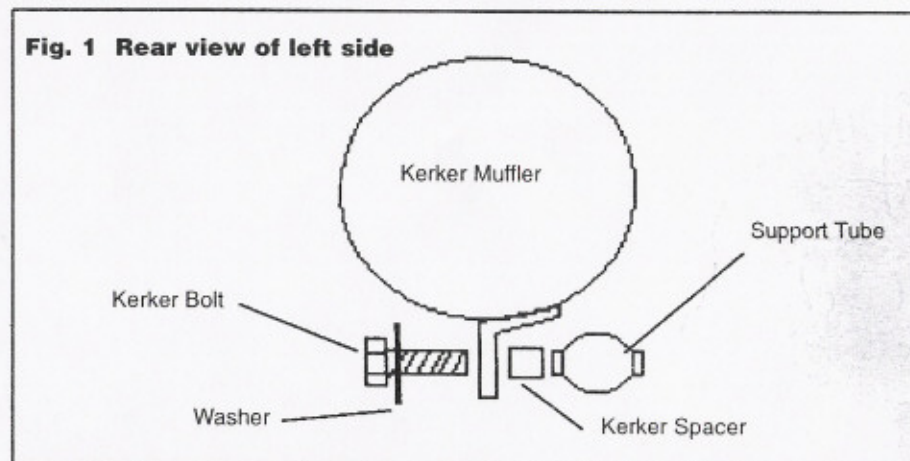

4. Slide right side muffler onto right side headpipe.
5. Bolt right muffler to stock support tube using stock hardware.
6. The stock support tubes may need to be loosened at their frame mounts and properly align the new mufflers.
7. After checking alignment, tighten in the following order: muffler inlet clamps, bolts to support tubes and the support tube frame bolts (if loosened for alignment).

ACCESSORY AND REPLACEMENT PARTS

Fiberglass Repack Kit (for standard only)	100-8045
* Muffler Body Left Side	027-7081
* Muffler Body Right Side	027-7082
Core Assembly (standard)	100-7081
Core Assembly with softech (Mikuni)	100-7857
* Hardware Kit	010-7586
Fishtail End Cap	108-8021
Turn-Out End Caps	108-8022
Tapered End Caps	108-7257

* Factory Order Only