

PARTS INCLUDED

Ref.	Part Number	Description	Qty
1)	00-200-00438	Carbon Fiber Muffler Assembly - Right	1
2)	00-200-00439	Carbon Fiber Muffler Assembly - Left	1
3)	00-200-00423	Midpipe Tube - Right	1
4)	00-200-00422	Midpipe Tube - Left	1
5)	04-18-41818	Muffler Bracket Spacer	4
6)	07-38-42060-35	T-bolt Clamp, #200-60	2
7)	01-5208125060-27	M8-1.25x60mm Hex Flange Head Cap Screw	2
8)	01-7408125-27	M8-1.25 Hex Flange Nut	2

08-50-44234 REV. A

19-2010-323-02

SLIP-ON EXHAUST, SS/CARBON FIBER

YAMAHA YZF-R1
2007-08

TOOLS REQUIRED

Ref.	Description	Ref.	Description
1)	3/8" Drive Ratchet	4)	10mm Socket
2)	3" Extension	5)	12mm Socket
3)	8mm Socket	6)	13mm Deep Socket

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Remove the two bolts from the rider seat. Remove the seat. (Figure #1)
- 3) Remove the passenger seat with the key.
- 4) Remove the two plastic screws from the top of the tail section. (Figure #2)
- 5) Remove the bolt from the center of the tail section. (Figure #3)
- 6) Remove the plastic shields that cover the stock mufflers on each side. (Figure #4)
- 7) Remove the two black pins from the bottom of the left and right tail section. (Figure #5)
- 8) Disconnect the passenger seat release cable. Carefully spread and remove the tail section from the motorcycle. (Figure #6)
- 9) Remove the three screws attaching the muffler mounting bracket covers. (Figure #7)
- 10) Remove the bolts securing the plastic heat shield to the right side exhaust pipe. Remove the shield. (Figure #8)
- 11) Loosen the clamps at the stock left and right midpipe connections. (Figure #9)





19-2010-323-02

SLIP-ON EXHAUST, SS/CARBON FIBER

YAMAHA YZF-R1
2007-08

INSTALLATION INSTRUCTIONS

- 12) Unbolt the left and right mufflers from the brackets. Remove the mufflers. (Figure #10)
- 13) Place one supplied t-bolt clamp onto the new left side midpipe. Slide the midpipe over the left side headpipe outlet. Do not tighten the t-bolt clamp at this time. (Figure #11)
- 14) Slide the new left side muffler over the midpipe then attach muffler, until fully seated. Using two supplied muffler mounting spacers, one M8-1.25x60mm hex flange head bolt, one M8-1.25 hex flange nut, and the original washers, secure the muffler to the motorcycle. Do not fully tighten at this time. (Figure #12)
- 15) Repeat steps 13-14 for the right side.
- 16) Position the exhaust system and then fully tighten the t-bolts clamps and muffler mounting bolts.
- 17) Clean all fingerprints and grease from the new exhaust system. Start the motorcycle and check for any exhaust leaks.
- 18) Reinstall the plastic heat shields over the both midpipes.
- 19) Place the tail section back onto the motorcycle. Reconnect the passenger seat release cable.
- 20) Reinstall all tail section mounting hardware, including the center bolt, plastic screws, and plastic push pin connectors.
- 21) Reinstall the passenger seat and rider seat.


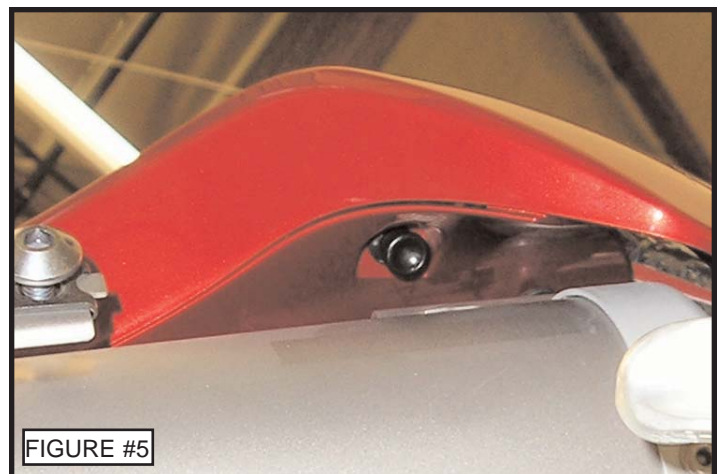
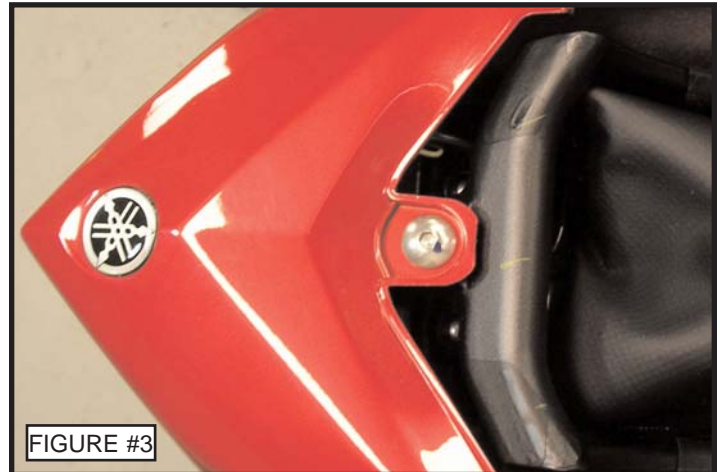


19-2010-323-02

SLIP-ON EXHAUST, SS/CARBON FIBER

YAMAHA YZF-R1
2007-08

INSTALLATION INSTRUCTIONS

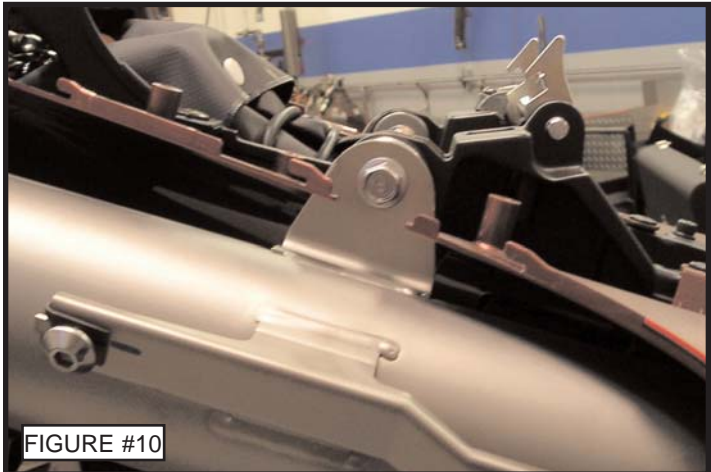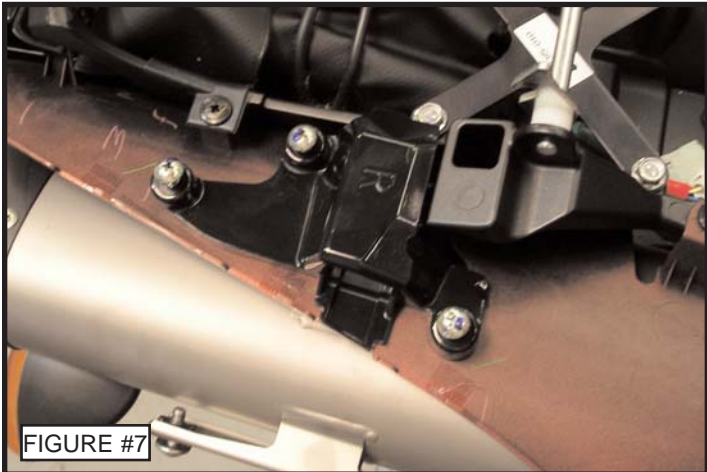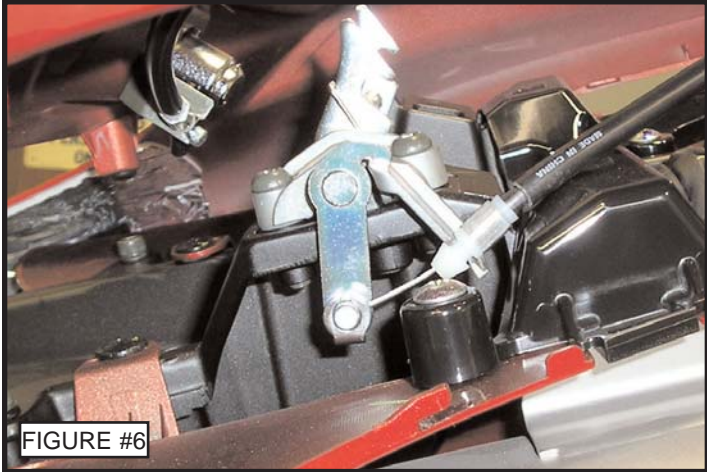


19-2010-323-02

SLIP-ON EXHAUST, SS/CARBON FIBER

YAMAHA YZF-R1
2007-08

INSTALLATION INSTRUCTIONS

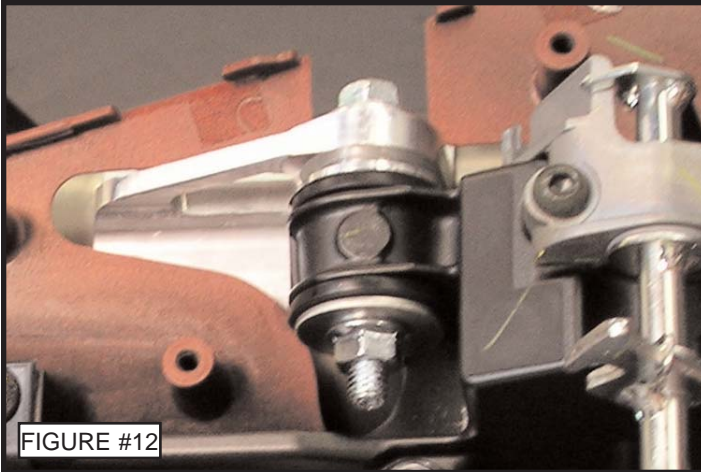

Jardine

PERFORMANCE PRODUCTS

Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400

REV: A 9-12-13