

**PARTS INCLUDED**

Ref.	Part Number	Description	Qty
1)	00-200-00110	Carbon Fiber Muffler Assembly - Right	1
2)	00-200-00112	Carbon Fiber Muffler Assembly - Left	1
3)	04-11-42895	Muffler Adapter Bracket	2
4)	01-530812530-27	M8-1.25x30mm Hex Flange Head Cap Screw	2
5)	01-7408125-27	M8-1.25 Hex Flange Nut, Zinc	2
6)	01-5208125020-SS	M8-1.25X20mm Socket Head Cap Screw	8

REV. A  
08-50-43830

19-3114-343-02

## RT-5 BOLT-ON EXHAUST, CARBON



KAWASAKI ZX-10R  
2006-07

### TOOLS REQUIRED

Ref.	Description
1)	3/8" Drive Ratchet
2)	6" Extension
3)	10mm Socket
4)	13mm Socket
5)	10mm Wrench
6)	12mm Wrench
7)	3mm Allen Wrench
8)	4mm Allen Wrench
9)	5mm Allen Wrench
10)	6mm Allen Wrench

### INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Remove the bolt securing the right side cover to the motorcycle. Pull firmly on the cover to release it from the mounting grommets, and set aside. See Figure #1
- 3) Repeat step #2 for the left side cover.
- 4) Remove the two bolts securing the rider seat to the motorcycle, and remove the seat.
- 5) Using the key, remove the passenger seat.
- 6) Following Figure #2 as a guide, remove the four bolts and two push pin fasteners from the top of the tail section.
- 7) Remove the four push pin fasteners from the underside of the tail section. Carefully spread and lift the tail section to expose the muffler mounting bolts.
- 8) Remove the right side passenger peg and set aside. See Figure #3
- 9) Remove the four nuts securing the right side muffler to the mounting flange. See Figure #3

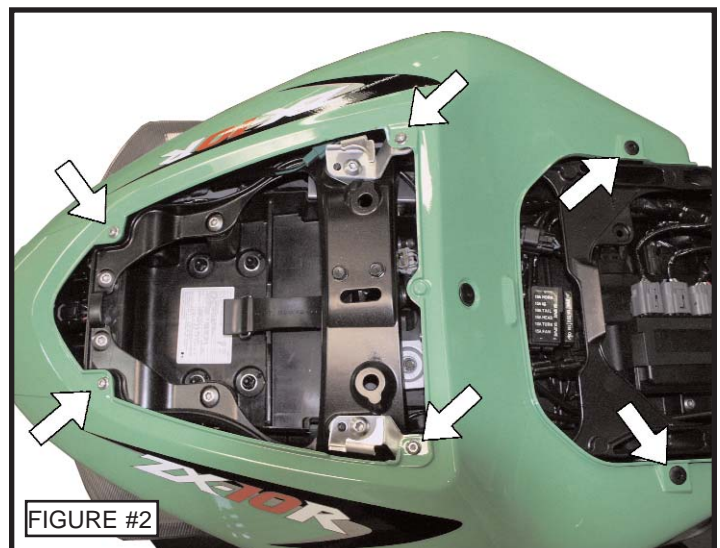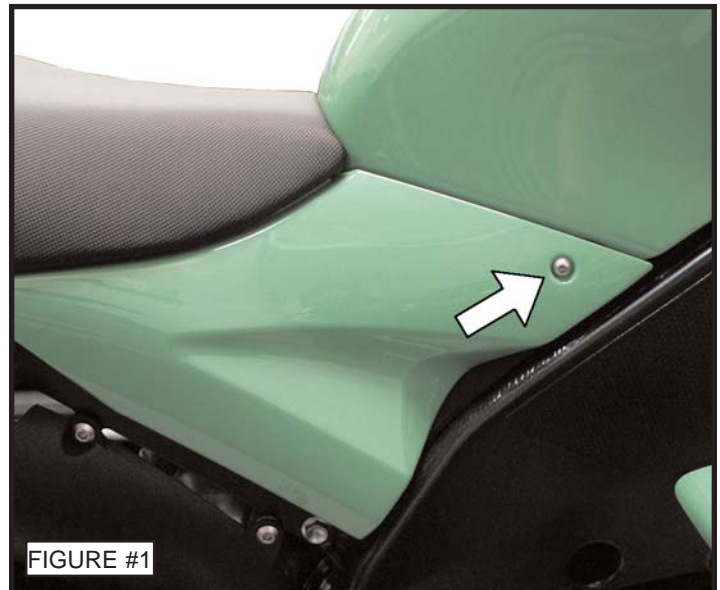


19-3114-343-02

RT-5 BOLT-ON EXHAUST, CARBON

KAWASAKI ZX-10R  
2006-07

## INSTALLATION INSTRUCTIONS

- 10) Remove the bolt and nut securing the right side muffler to the sub frame. Remove the right side muffler. See Figure #4. **NOTE: Inspect the crush gasket and replace if necessary.**
- 11) Using the original bolt, nut and washer, mount one supplied muffler adapter bracket to the sub frame. When mounted, the slotted hole should be in the down position. See Figure #5
- 12) Place the right side Jardine muffler against the mounting flange and loosely secure using four supplied M8-1.25x20mm socket head bolts.
- 13) Loosely secure the muffler mounting bracket to the adapter bracket using one supplied M8-1.25x30mm hex flange head bolt, and one M8-1.25 hex flange nut.
- 14) Fully tighten the muffler flange mounting bolts, then tighten the muffler bracket mounting bolts.
- 15) Reinstall the right side passenger peg.
- 16) Repeat steps #8-15 for the left side muffler installation.

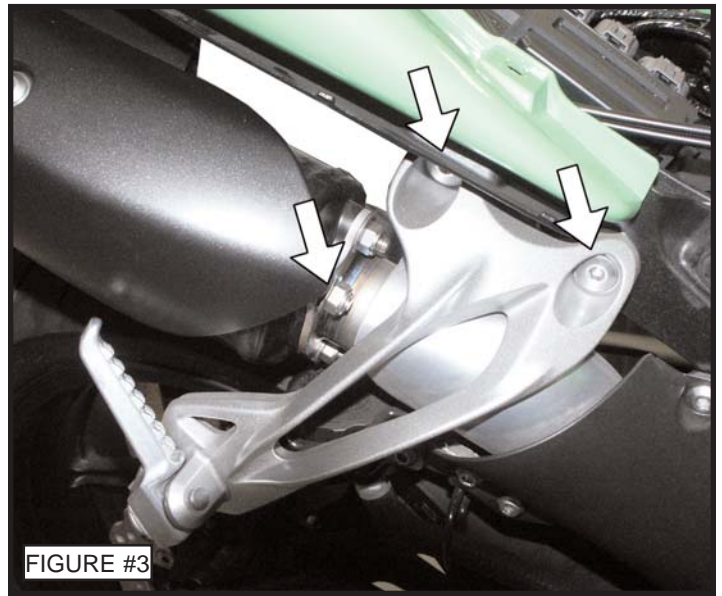

19-3114-343-02

RT-5 BOLT-ON EXHAUST, CARBON

KAWASAKI ZX-10R  
2006-07

---

## INSTALLATION INSTRUCTIONS

- 16) Place the tail section into the correct position and secure using all original bolts and push pin fasteners.
- 17) Reinstall rider and passenger seats.
- 18) Reinstall the side covers.
- 19) Clean all fingerprints and grease from the exhaust system prior to starting the motorcycle.
- 20) Start the motorcycle and check for any exhaust leaks at the flange area.

# **Jardine**

**PERFORMANCE PRODUCTS**

## **Terms & Conditions**

**Returns:** All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

**All warranty claims must be made through your point of purchase.**

**Limited Warranty:** Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: [Jardine@SuperTrapp.com](mailto:Jardine@SuperTrapp.com)

[www.JardineProducts.com](http://www.JardineProducts.com)

TECH: (216) 265-8400

REV: A 9-12-13