

18-7009-524-02

## RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-08

### PARTS INCLUDED

| Ref. | Part Number      | Description                          | Qty |
|------|------------------|--------------------------------------|-----|
| 1)   | 00-200-00060     | Slip-on S-bend Assembly              | 1   |
| 2)   | 00-200-00056     | Carbon Fiber Dual Outlet Muffler     | 1   |
| 3)   | 04-24-42866      | Supersport Fender Bracket            | 1   |
| 4)   | 03-46-43098      | Muffler Mounting Strap               | 1   |
| 5)   | 07-27-42005      | Muffler Strap Silicone Rubber Sleeve | 1   |
| 6)   | 01-5106100016-SS | M6-1.0x16mm Socket Button Head Bolt  | 4   |
| 7)   | 01-7406100-27    | M6-1.0 Hex Flange Nut                | 2   |
| 8)   | 07-41-35929      | Dual Swivel Spring, Long             | 2   |
| 9)   | 07-38-42062-35   | T-Bolt Clamp                         | 1   |

### TOOLS REQUIRED

| Ref. | Description        | Ref. | Description                      |
|------|--------------------|------|----------------------------------|
| 1)   | 3/8" Drive Ratchet | 7)   | 5mm Allen Socket                 |
| 2)   | 3" Extension       | 8)   | 8mm Allen Socket                 |
| 3)   | 10mm Socket        | 9)   | 10mm Wrench                      |
| 4)   | 12mm Socket        | 10)  | 12mm Wrench                      |
| 5)   | 13mm Socket        | 11)  | Torque Wrench                    |
| 6)   | 4mm Allen Socket   | 12)  | Spring Tool or Needlenose Pliers |

### INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Lift up on the front of the passenger seat and remove the bolt securing the passenger seat to the subframe. Remove the passenger seat. See Figure #1
- 3) Using the key, remove the rider seat.
- 4) Remove the four bolts securing the tail section to the subframe. lift up on the tail section and disconnect the tail light wire. remove the tail section. See Figure #2





18-7009-524-02

RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-08

## INSTALLATION INSTRUCTIONS

- 5) Remove the four bolts securing the plastic cover over the stock muffler. Remove the cover. See Figure #3
- 6) Remove the left and right turn signal mounting bolts. Slide the turn signals/license plate light assembly away from the license plate mount and disconnect all wires. Make note of the right and left turn signal wiring. Set turn signal assembly aside. See Figure #4
- 7) Remove the four bolts that secure the license plate bracket to the stock muffler. Remove the license plate bracket. See Figure #5
- 8) Loosen the muffler inlet clamp. See Figure #6
- 9) Remove and retain the muffler mounting bolt and nut. Remove the muffler assembly from the motorcycle. See Figure #7

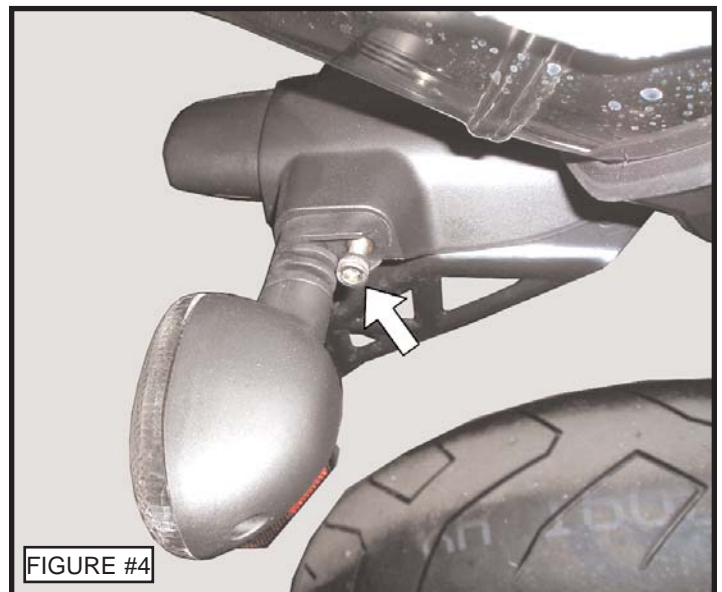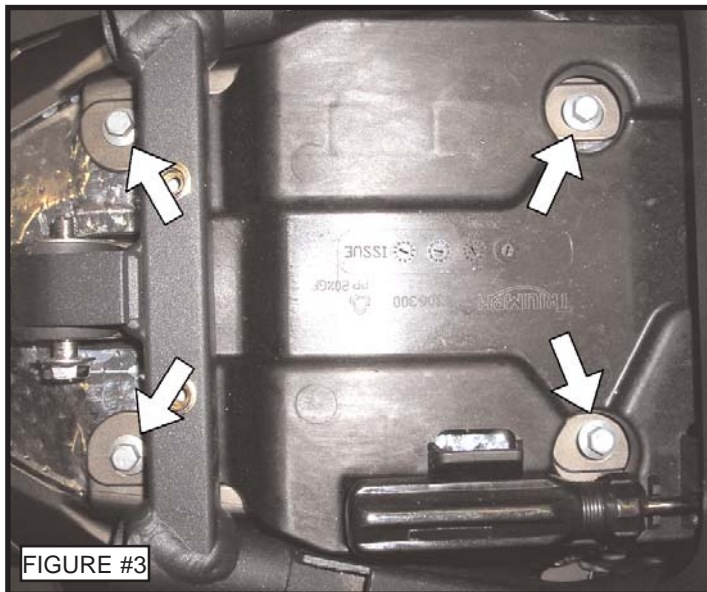



18-7009-524-02

RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-08




## INSTALLATION INSTRUCTIONS

- 10) Loosen the lower s-bend clamp enough that it will completely slide off of the s-bend, down onto the headpipe outlet. See Figure #8

**NOTE:** If you don't remove the clamp from the s-bend, the s-bend will not fit past the shock spring.

- 11) Remove and retain the s-bend mounting bolt. Carefully remove the s-bend from the motorcycle. See Figure #9

- 12) Remove the two rearmost inner fender mounting bolts. Place the supplied supersport fender bracket against the rear fender and secure the bracket to the subframe using two supplied M6-1.0x16mm button head bolts. Tighten bolts to factory specification. See Figure #10

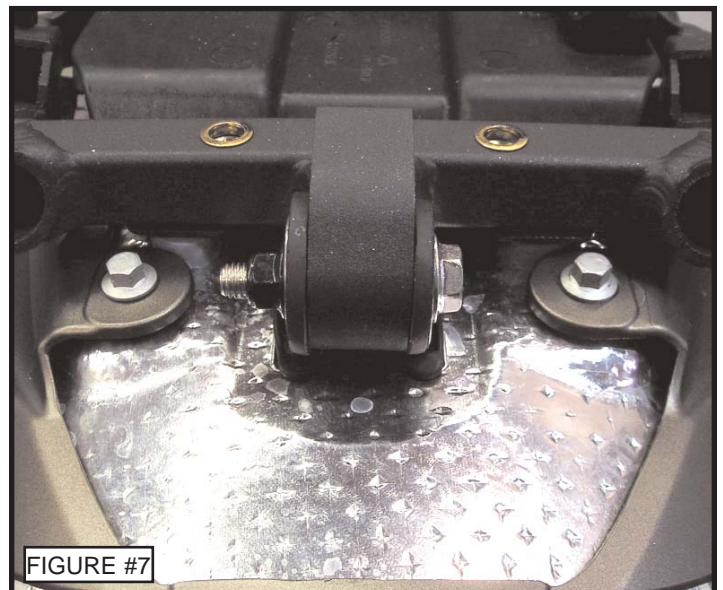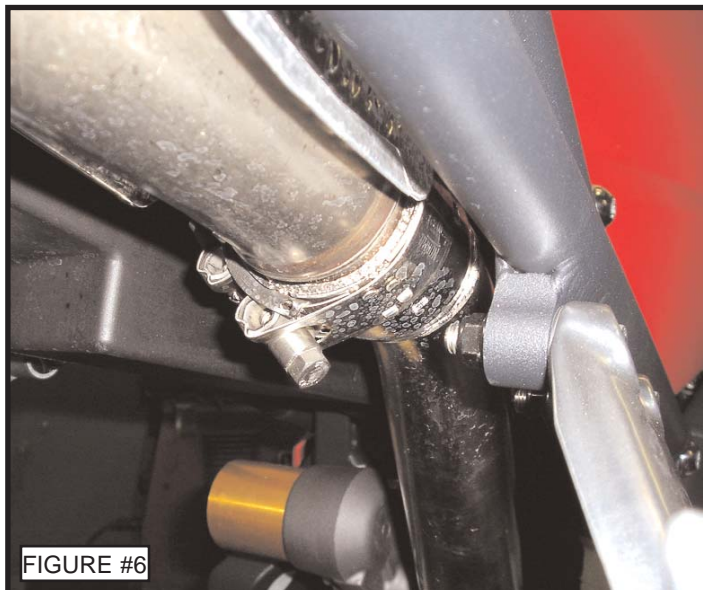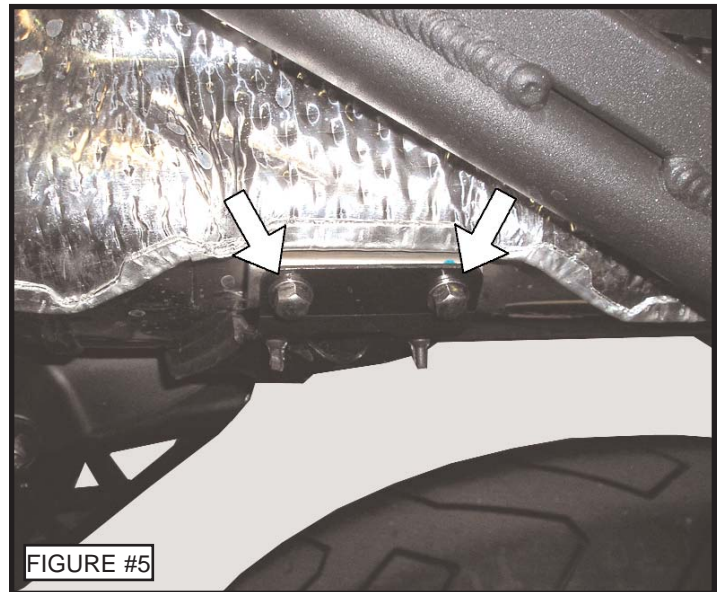



18-7009-524-02

RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-07

## INSTALLATION INSTRUCTIONS

- 13) Using the two supplied M6-1.0x16mm socket button head bolts, and two M6-1.0 hex flange nuts, mount the turn signals to the locations provided on the supersport fender bracket. Fully tighten the mounting hardware. See Figure #11
- 14) Route the turn signal wiring as show in Figure #12 and reconnect all turn signal wires to the harness.
- 15) Remove the gasket from the stock s-bend inlet and install it into the Jardine s-bend inlet.
- 16) Place the supplied t-bolt clamp onto the headpipe outlet tube. Carefully feed the Jardine s-bend into the motorcycle and slide it over the headpipe outlet tube. See Figure #13
- 17) Loosely install the s-bend mounting bolt to the new s-bend.

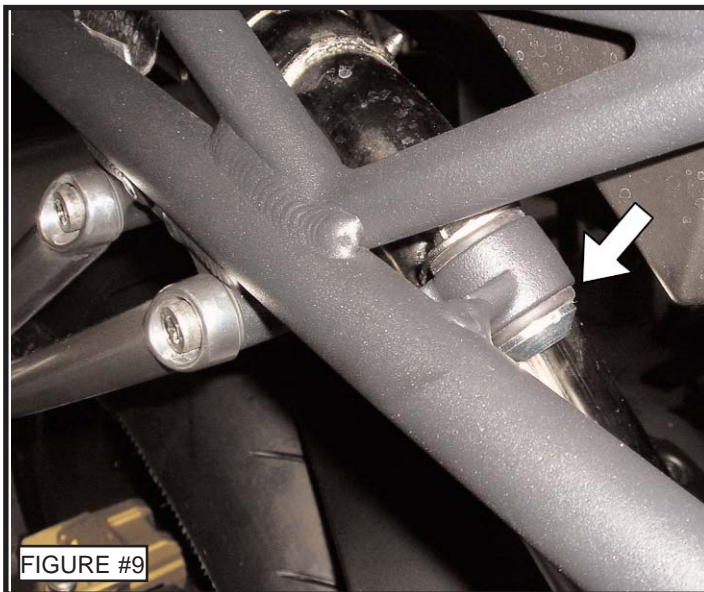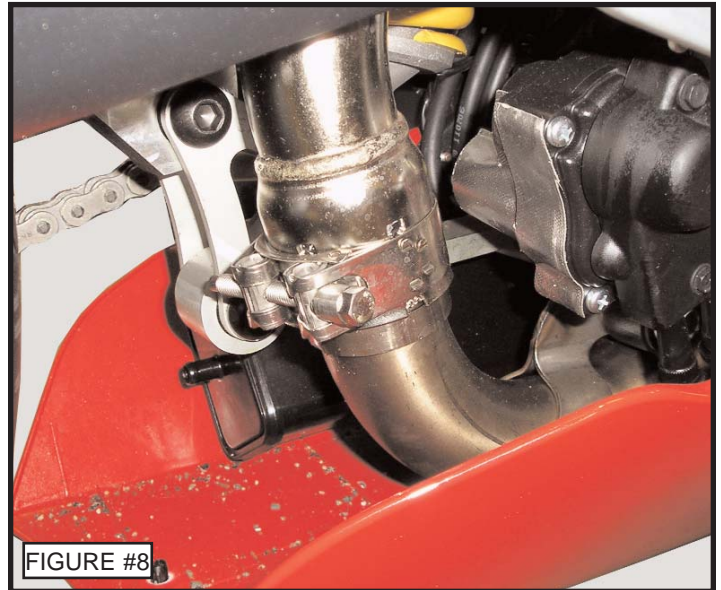





18-7009-524-02

RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-08

INSTALLATION INSTRUCTIONS

- 18) Slide the dual outlet muffler onto the s-bend until it is fully seated. Attach the two provided swivel springs to the muffler/s-bend connection.
- 19) Attach the provided silicone rubber sleeve to the inside of the muffler mounting clamp.
- 20) Slide the muffler mounting clamp over the muffler and secure it to the subframe using the original muffler mounting hardware. See Figure #14
- 21) Fully tighten the t-bolt clamp, s-bend mounting bolts, and muffler mounting bolt.
- 22) Connect the tail light wire from the tail section, to the harness. Carefully place the tail section over the subframe. Secure the tail section to the subframe using the four original mounting bolts. See Figure #15

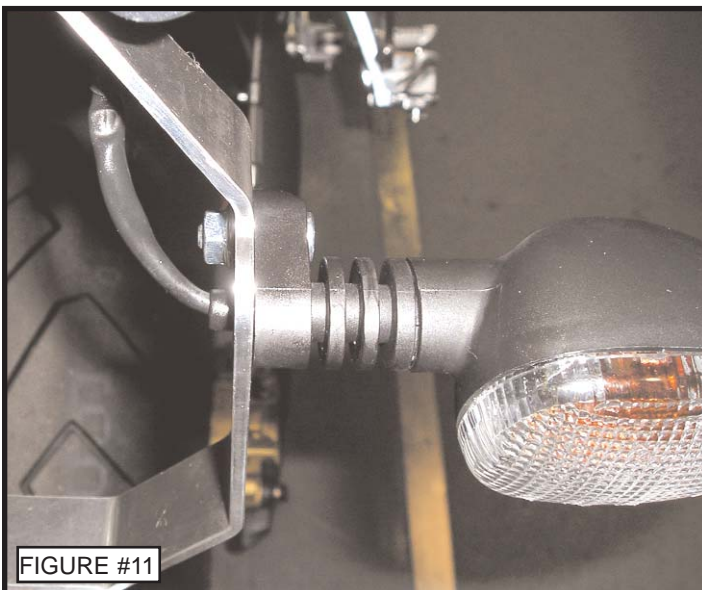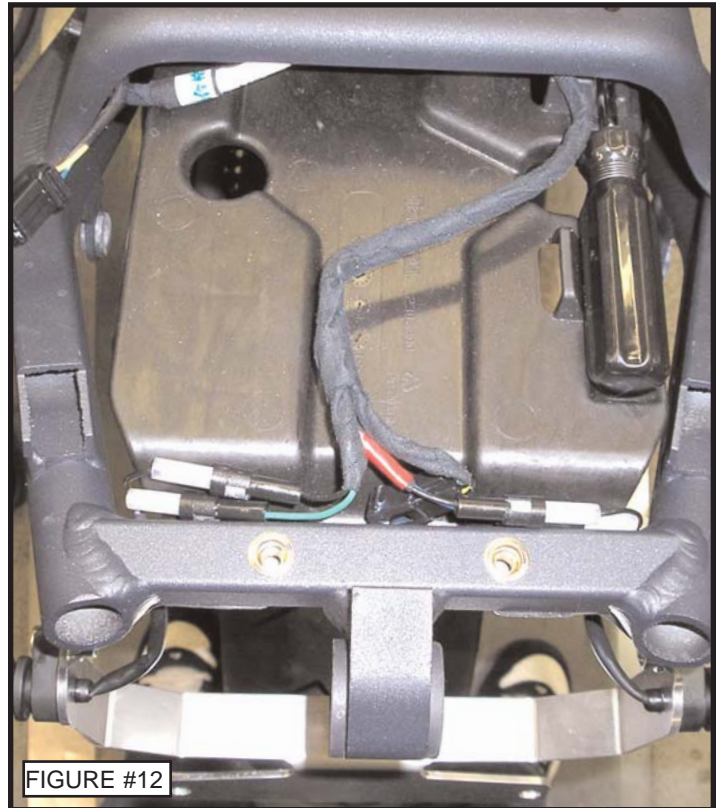




18-7009-524-02

RT1 DUAL OUTLET SLIP-ON EXHAUST

TRIUMPH DAYTONA 675  
2006-08

## INSTALLATION INSTRUCTIONS

- 23) Reinstall the rider and passenger seats. See Figure #16
- 24) Clean all fingerprints and grease from the exhaust system.
- 25) Start the motorcycle and check for any exhaust leaks.

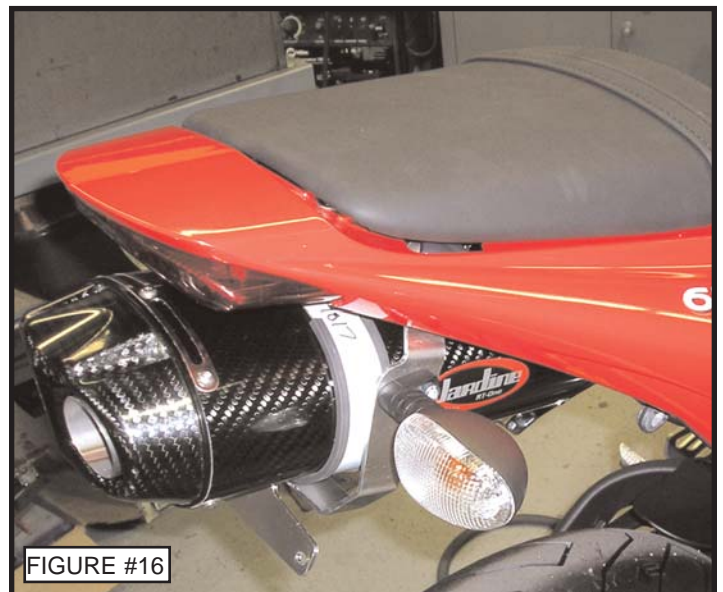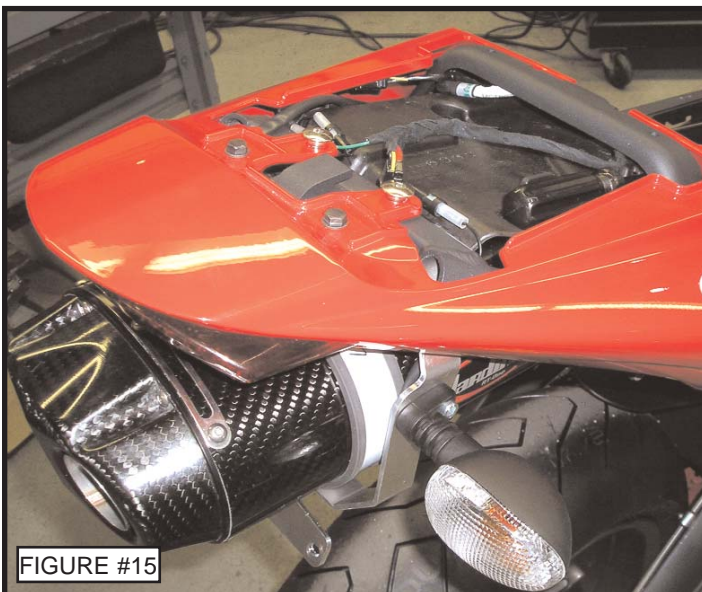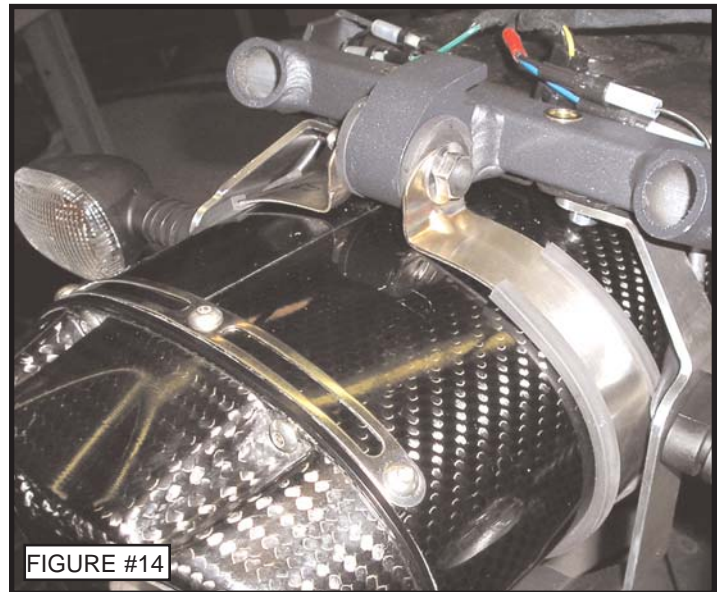



## Terms & Conditions

**Returns:** All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

**All warranty claims must be made through your point of purchase.**

**Limited Warranty:** Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof of purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.