




SLIP-ON EXHAUST, SS/ALUM

KAWASAKI ZX-14 2006-07

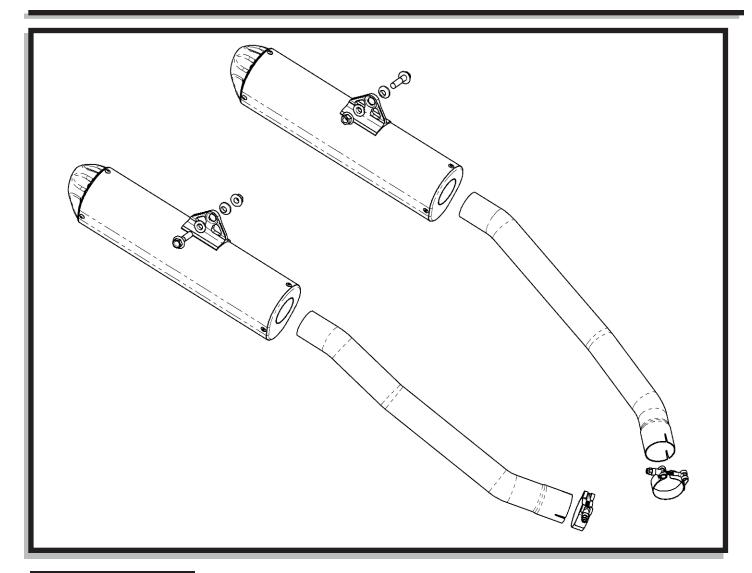

PARTS INCLUDED

| Ref. | Part Number | Description | | |
|------|------------------|---|---|--|
| 1) | 00-200-00174 | Aluminum Muffler Assembly - Right | 1 | |
| 2) | 00-200-00175 | Aluminum Muffler Assembly - Left | 1 | |
| 3) | 02-06-43130 | Midpipe Tube - Right | 1 | |
| 4) | 02-06-43131 | Midpipe Tube - Left | 1 | |
| 5) | 04-18-42590 | Muffler Bracket Spacer | 4 | |
| 6) | 07-38-42063-35 | T-bolt Clamp, #200-63 | 2 | |
| 7) | 01-5210125065-27 | M10-1.25x65mm Hex Flange Head Cap Screw | 2 | |
| 8) | 01-7410125-27 | M10-1.25 Hex Flange Nut | 2 | |

·····TECH: (&%* Ł&*)!,(\$\$

19-3016-123-02

SLIP-ON EXHAUST, SS/ALUM

KAWASAKI ZX-14 2006-07

TOOLS REQUIRED

| Ref. | Description | Ref. | Description |
|------|--------------------|------|------------------|
| 1) | 3/8" Drive Ratchet | 4) | 10mm Socket |
| 2) | 3" Extension | 5) | 12mm Socket |
| 3) | 8mm Socket | 6) | 13mm Deep Socket |

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Loosen the stock right side "headpipe exit to midpipe" clamp bolt.
- 3) Remove the right side muffler mounting hardware. The stock washers will be retained.
- **4)** Carefully slide the stock right side muffler assembly off of the motorcycle.
 - **NOTE:** If the stock gasket did not come off with the midpipe, it must be remove from the headpipe exit.
- 5) Place one provided t-bolt clamp onto the notched end of the new right side midpipe, and slide the midpipe over the right side heapipe outlet.
- 6) Slide the new right side muffler onto the midpipe outlet until it is fully seated.
- 7) Hold two provided muffler bracket spacers against the inside and outside of the muffler mounting bracket, and place the muffler mounting bracket against the outside passenger peg mount washer. Feed one supplied M10-1.25x65mm hex flange head bolt through the outer muffler bracket spacer, muffler mounting bracket, inner muffler mounting spacer, washer, and passenger peg mount. Secure the assembly using one supplied M10-1.25 hex flange nut. Do not fully tighten at this time.
- 8) Position the right side exhaust assembly so that it is the best possible location. Fully tighten the t-bolt clamp, then the muffler mounting bolt.
- 9) Repeat Step 2-8 for the left side installation.
- 10) Clean all fingerprints and grease from the new exhaust system. Start the motorcycle and check for any exhaust leaks.

E: Jardine@SuperTrapp.com TECH: (216)265-8400



Terms & Conditions

Returns: All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

<u>Limited Warranty:</u> Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof or purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

TECH: (216) 265-8400