

SLIP-ON RT5 EXHAUST, CARBON FIBER

TRIUMPH SPEED TRIPLE 2005-10

_			
R TS	INCLUDED		
ARTS	INCLUDED Part Number	Description	Qty
ARTS		Description Slip-on Collector	Qty 1
ARTS	Part Number		
\RTS	Part Number 00-200-02500	Slip-on Collector Midpipe Assembly, Left	1
ARTS	Part Number 00-200-02500 00-200-02501 00-200-02502	Slip-on Collector Midpipe Assembly, Left Midpipe Assembly, Right	1 1
ARTS	Part Number 00-200-02500 00-200-02501 00-200-02502 00-200-02508	Slip-on Collector Midpipe Assembly, Left Midpipe Assembly, Right Carbon Fiber Muffler Assembly, Left	1 1 1 1
ARTS	Part Number 00-200-02500 00-200-02501 00-200-02502 00-200-02508 00-200-02510	Slip-on Collector Midpipe Assembly, Left Midpipe Assembly, Right Carbon Fiber Muffler Assembly, Left Carbon Fiber Assembly, Right	1 1 1 1 1 1
A R T S	Part Number 00-200-02500 00-200-02501 00-200-02502 00-200-02508	Slip-on Collector Midpipe Assembly, Left Midpipe Assembly, Right Carbon Fiber Muffler Assembly, Left	1 1 1 1

SLIP-ON RT5 EXHAUST, CARBON FIBER


TRIUMPH SPEED TRIPLE 2005-10

TOOLS REQUIRED

Ref.	Description	Ref.	Description
1)	3/8" Drive Ratchet	4)	10mm Socket
2)	3" Extension	5)	12mm Socket
3)	8mm Socket	6)	13mm Deep Socket

INSTALLATION INSTRUCTIONS

- 1) Make sure the motorcycle is cool and place securely on a service lift or stand.
- 2) Remove the seat.
- Remove the screws securing the right & left tail section side pods to the sub-frame. Carefully remove the side pods. (Fig. 1 & 2)
- Remove the two bolts securing the heat shield covering the stock right side muffler. Remove the heat shield. (Fig. 3)
- Loosen the stock right side muffler inlet clamp. (Fig. 4)
- 6) Remove the bolt and nut securing the stock right side muffler to the motorcycle sub-frame. (Fig. 3 & 5) Remove the right side muffler.
- 7) Repeat Steps #4-7 to remove the left side muffler.
- 8) Loosen the clamp securing the header assembly to the stock midpipe inlet. (Fig. 6)
- **9)** Remove the two bolts securing the right side rider peg to the motorcycle frame. Carefully allow the rider peg assembly to hang in place. *NOTE: This allows easier access to the midpipes.*

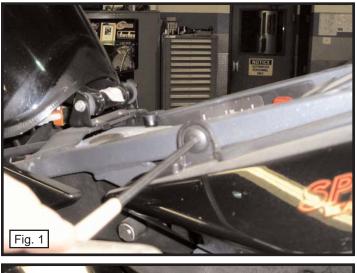



SLIP-ON RT5 EXHAUST, CARBON FIBER


TRIUMPH SPEED TRIPLE 2005-10

INSTALLATION INSTRUCTIONS

- **10)**Slide the midpipe assembly out of the headpipe outlet and carefully remove the complete assembly from the motorcycle. NOTE: Make sure the stock gasket stays in place, in the headpipe outlet.
- **11)** Slide the new Slip-on Collector into the headpipe outlet. (Fig. 7) Do not tighten the headpipe clamp at this time.
- 12) Slide the new Right Side Midpipe into the upper Fig. 3 collector outlet tube. Using one supplied Long Swivel Spring, secure to the collector.
- 13) Slide the new Left Side Midpipe into the lower collector outlet tube. Using the remaining supplied Long Swivel Spring, secure to the collector.
- 14) Slide the new Right Side Muffler onto the outlet of the right side midpipe. Using one supplied M8-1.25x50mm Hex Flange Head Bolt, and one original muffler mounting nut, loosely secure the muffler to the sub-frame mounting point.
- **15)**Using one supplied Short Swivel Spring, secure the right side muffler to the right side midpipe.
- 16) Slide the new Left Side Muffler onto the outlet of the left side midpipe. Using the remaining supplied M8-1.25x50mm Hex Flange Head Bolt, and one original muffler mounting nut, loosely secure the muffler to the sub-frame mounting point.
- **17)**Using the remaining supplied Short Swivel Spring, secure the left side muffler to the left side midpipe.





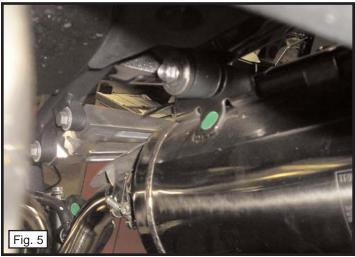

SLIP-ON RT5 EXHAUST, CARBON FIBER

TRIUMPH SPEED TRIPLE 2005-10

INSTALLATION INSTRUCTIONS

- **18)**Position the exhaust system so that it is in the best possible orientation. Fully tighten the muffler mounting hardware, and the headpipe outlet clamp.
- **19)**Clean all fingerprints and grease from the exhaust system.
- **20)**Reinstall the right side rider footpeg assembly. Tighten bolts to factory specification.
- **21)**Reinstall the tail section side pods.
- 22) Reinstall the rider seat.
- 23) Start your motorcycle and go ride!







Terms & Conditions

<u>Returns:</u> All requests for product returns must be made within 30 days from date of purchase. The return has to have a Return Material Authorization (RMA) number from Jardine and must include a copy of the original purchase invoice. Customer pays for the return freight and Jardine will exchange product or process a credit to your account. All returns must be in the original packaging to be eligible for any credit or exchange. Any return sent C.O.D. will not be accepted. Special order sales are final and may not be returned.

All warranty claims must be made through your point of purchase.

Limited Warranty: Jardine's warranty extends to the original purchaser only and a copy of the sales receipt must be provided. Keep your receipts. Jardine products are warranted against defective materials and workmanship for a period of 1 year from date of original customer purchase and to the original customer only. Proof or purchase is required. Any non-defective, unopened, unused, not installed item may be returned within seven working days of receipt and will be subject to a 15% restocking / repackaging fee. Bluing and / or discoloration of chrome exhaust systems / products are not covered. Contact the Jardine Customer Service Department directly at 216-265-8400 to obtain a Return Material Authorization (RMA) number prior to return of product. Authorized product will be repaired or returned at Jardine's discretion. Jardine is not responsible for any other expenses, including labor for removal of defective parts incurred by the customer under the terms of this warranty. Nor shall Jardine be responsible for any damages whether consequential, special, contingent or otherwise, or expenses or injury arising from the use of Jardine products. A detailed copy of Sale Terms, Conditions and Warranty information is available at request.

Jardine and Jardine Performance Products are registered trademarks of SuperTrapp Industries, Inc. and may not be used without consent from SuperTrapp Industries, Inc. SuperTrapp Industries, Inc. retains all marketing rights to its products and trademarks.

Jardine Performance Products is manufactured by SuperTrapp Industries, Inc. in Cleveland, OH. Our exhausts, highway bars, backrests, fender kits & accessories for V-Twin, Metric, Sport & Dirt applications are made in the U.S.A. Jardine has been manufacturing performance products since 1959.

E: Jardine@SuperTrapp.com

www.JardineProducts.com

TECH: (216) 265-8400